

Figure A



Figure C

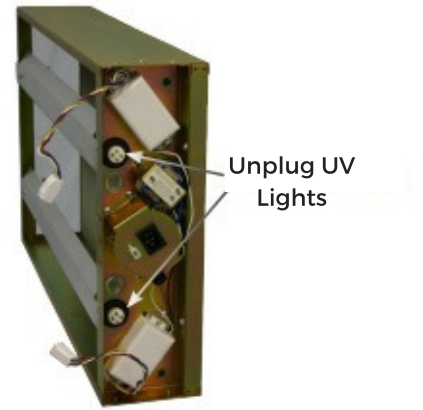


Figure D



Figure B

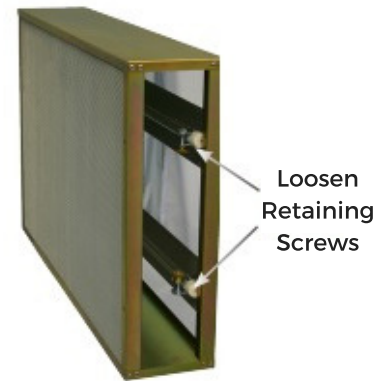


Figure E

**Ensure filter and photocatalytic module are installed in proper air flow sequence.**

## Changing the Filter

1. Unplug the power cord from the HEPS unit. Unscrew the two locking knobs and remove the door (Figure A).
2. Remove old filter and replace with new filter. Make sure airflow arrow on filter is pointing to the inside of module (Figure B).

## Changing the UV Lamps

1. Remove filter as in above (Figure A, B).
2. Remove Photocatalytic module (Figure C).
3. Unplug UV lights, loosen retaining screws, and remove UV lights (Figure D, E).
4. Replace UV lights, re-tension retaining screws, and replace plug-ins.
5. Replace Photocatalytic module and filter, secure door and re-insert plug, check sight ports to ensure lamp illumination.